



www.diacek.eu



Diarka

User manual



The Diarka projector is used for home projection of 35mm diafilms, slides and pffilms.

Assembling and inserting of the film:

Screw the tripod **A** into the nut, don't tighten by force. Open the legs of the tripod.

The back side of the arched frame **B** is black, this will be placed closer to the light. Insert the film into the frame mirror-inverted, insert the pressure frame **C** with the smooth side towards you. Insert into the groove.

Connect an accessory - power switch, charger or power bank to the USB terminal.

Focus adjustment:

Use a smooth white wall, white paper, or canvas as the screen. Focus the image by rotating the lens **D**.

We recommend placing the projector on an elevated place (on the edge of the furniture), in case of projection from the floor, underlay the tripod leg. The projector can also be held in the hand.

The maximum image size is 80 x 50 cm and the distance from the projection wall is up to 2 meters.

Do not expose the projector to temperatures above 60 °C. The maximum period of use without switching off for cooling down is recommended to be 60 minutes. Electronic device. Usage by children only under the supervision of an adult.

Video and recommendations:



© 2020 Pavel Pohorský (Boris), David Hoffmann

